


# 9523 Usage Instruction

## one. Basic information (Figure 1)

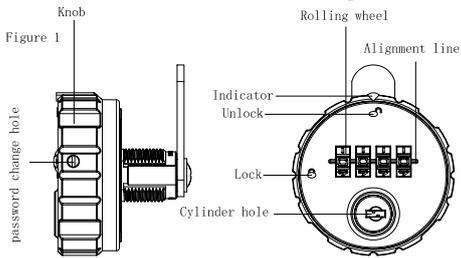


## 二. How to set up passwords


■ Factory default passwords 0-0-0-0

1. Slide the rolling wheel to the correct passwords (For the first time, passwords are factory default passwords.) Then turn the knob to the UNLOCK position like Figure 2

Figure 2

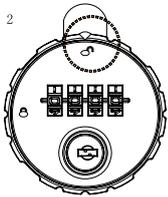


2. Please insert a small screw to password change hole and turn according to Figure 3

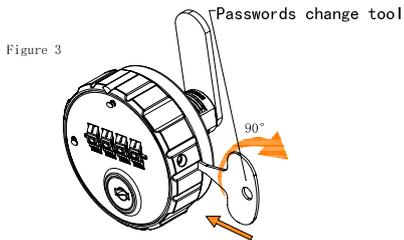


3. Slide the rolling wheel to the numbers you want (Figure 4)

Figure 4

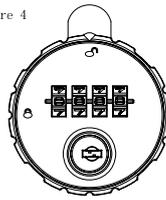

4. Turn the knob to the lock position to finish setting up new passwords (Figure 5)


Figure 5

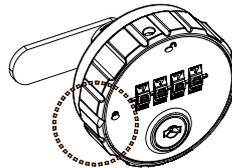

## 三. How to find forgotten passwords


1. When you forget the passwords, please insert the key in the cylinder, and turn 90° according to Figure 6

Figure 6

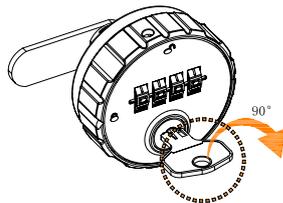


2. Keep the key inserted, slide the rolling wheel one by one from left to right, once the rolling wheel stops, it comes to the correct number. (Figure 7)

Figure 7

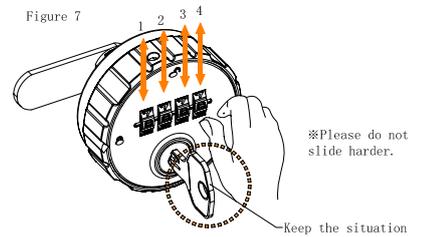

3. Turn the key 90° degree back, take out the key. (Figure 8)

Figure 8

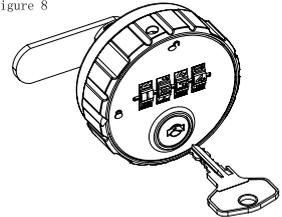

■ please keep the key well for emergency needs.

## 四. Fix hole dimension

